


- Onderdelen -
 - Spare parts -
 - Pièces de rechange -
 - Ersatzteile -



Y454000

Pos.	Art.no.	Description	Pos.	Art.no.	Description
1	Y454000-1	Nut	43	Y454000-43	Reservoir
2	Y454000-2	Spring Washer	44	Y454000-44	Bushing
3	Y454000-3	Shaft Axle	45	Y454000-45	Piston Rod
4	Y454000-4	Screw	46	Y454000-46	Cylinder
5	Y454000-5	Spring Washer	47	Y454000-47	Spacer
6	Y454000-6	Plates	48	Y454000-48	Filter
7	Y454000-7	Slide Plates	49	Y454000-49	Magnet Steel
8	Y454000-8	Snap Ring	50	Y454000-50	Valve Block
9	Y454000-9	Washer	51	Y454000-51	O-Ring
10	Y454000-10	Front Wheel	52	Y454000-52	Nylon Washer
11	Y454000-11	Nut	53	Y454000-53	Screw
12	Y454000-12	Axle	54	Y454000-54	Ball
13	Y454000-13	Snap Ring	55	Y454000-55	Square-Type Ring
14	Y454000-14	Washer	56	Y454000-56	Linking Axle
15	Y454000-15	Rear Wheel	57	Y454000-57	Ball
16	Y454000-16	Crease Fitting	58	Y454000-58	Seat
17	Y454000-17	Screw	59	Y454000-59	Spring
18	Y454000-18	Screw	60	Y454000-60	O-Ring
19	Y454000-19	Lock Nut	61	Y454000-61	Screw
20	Y454000-20	Spacer	62	Y454000-62	Ball
21	Y454000-21	Lifting Arm Ass.	63	Y454000-63	Gasket
22	Y454000-22	Hand Grip	64	Y454000-64	Screw
23	Y454000-23	Handle	65	Y454000-65	Gasket
24	Y454000-24	Handle	66	Y454000-66	Screw
25	Y454000-25	Screw	67	Y454000-67	O-Ring
26	Y454000-26	Screw	68	Y454000-68	Spring
30	Y454000-30	Snap Ring	69	Y454000-69	Spring
31	Y454000-31	Axle	70	Y454000-70	Ball
32	Y454000-32	Retaining Spring	71	Y454000-71	O-Ring
33	Y454000-33	Pin	72	Y454000-72	Plunger
34	Y454000-34	Socket	73	Y454000-73	Pump
35	Y454000-35		74	Y454000-74	O-Ring
36	Y454000-36	Screw	75	Y454000-75	Back-Up Ring
37	Y454000-37	Screw	76	Y454000-76	Wiper
38	Y454000-38	Ball	77	Y454000-77	Pin
39	Y454000-39	Cylinder Nut	78	Y454000-78	Guide
40	Y454000-40	O-Ring	79	Y454000-79	Postbøner
41	Y454000-41	O-Ring	80	Y454000-80	Nut
42	Y454000-42	Screw	81	Y454000-81	Plug
			*	Y454000-PUKK	Power Unit Repair Kit

- Onderdelen -
 - Spare parts -
 - Pièces de rechange -
 - Ersatzteile -

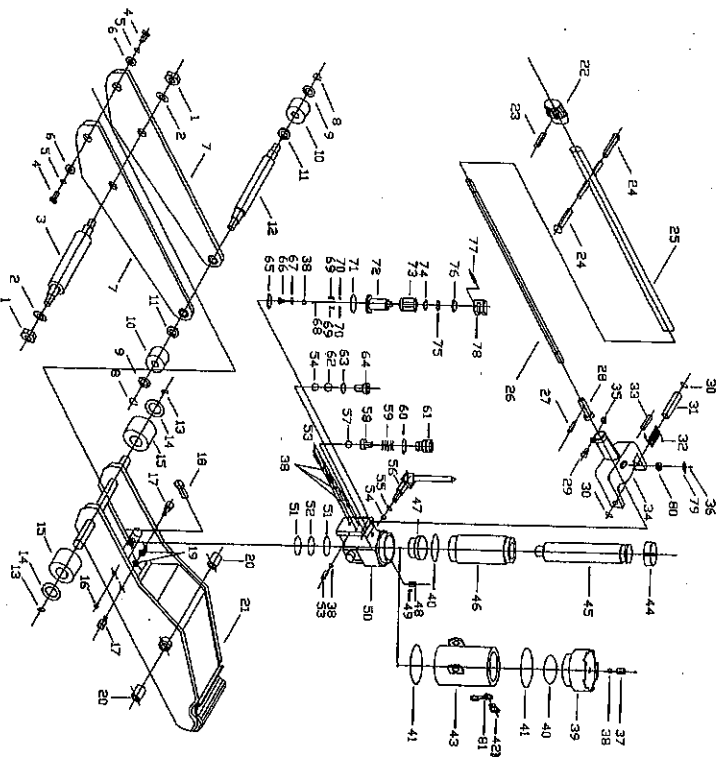

NEW STYLE