


## - Spare Part List -

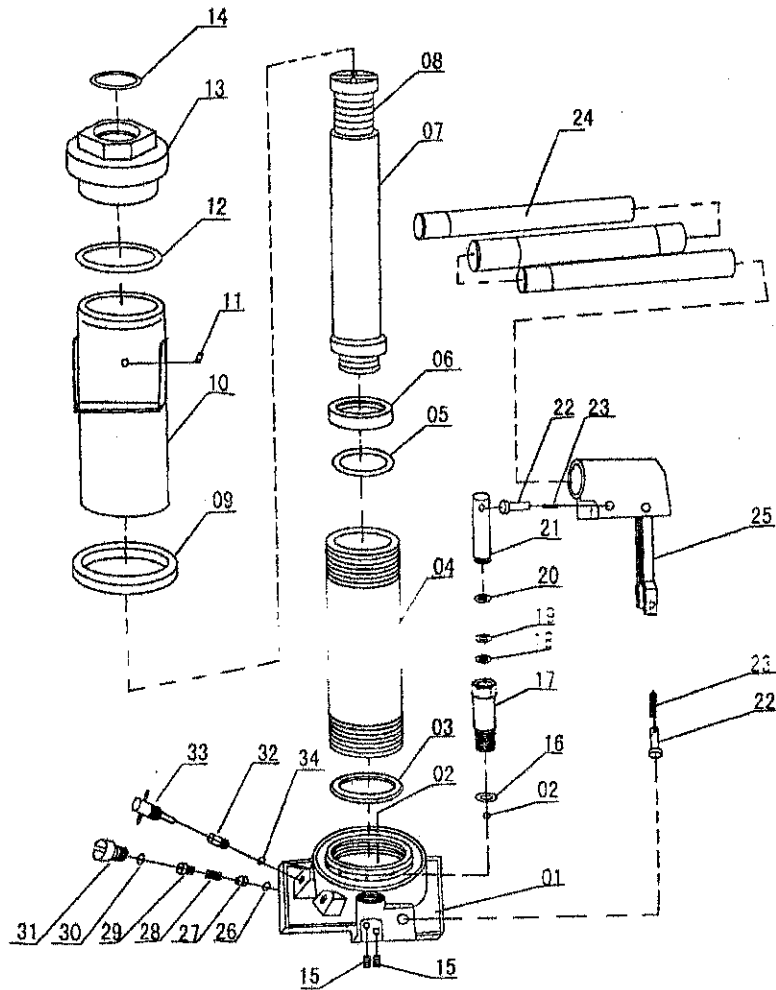

### # Y413000

Pos.	Art. Number	Description	Pos.	Art. Number	Description
1	Y413000-01	Base	19	Y413000-19	O-ring
2	Y413000-02	Steel Ball (Ø 6)	20	Y413000-20	Snap Ring
3	Y413000-03	Copper Gasket	21	Y413000-21	Pump Piston
4	Y413000-04	Cylinder	22	Y413000-22	Axle
5	Y413000-05	O-ring	23	Y413000-23	Cotter Pin
6	Y413000-06	U-cup Ring	24	Y413000-24	Handle Assembly
7	Y413000-07	Ram Plunger	25	Y413000-25	Linkage
8	Y413000-08	Extension Screw	26	Y413000-26	Steel Ball (Ø 4)
9	Y413000-09	Square Seal	27	Y413000-27	Stud
10	Y413000-10	Oil Tank	28	Y413000-28	Compression Spring
11	Y413000-11	Oil Plug	29	Y413000-29	Pressure Screw
12	Y413000-12	Nylon Gasket	30	Y413000-30	O-ring
13	Y413000-13	Top Nut	31	Y413000-31	Safety Screw
14	Y413000-14	O-ring	32	Y413000-32	Square Seal
15	Y413000-15	Oil Stopper	33	Y413000-33	Release Valve
16	Y413000-16	Copper Gasket	34	Y413000-34	Steel Ball (Ø 8)
17	Y413000-17	Pump Cylinder	*	Y413000-RK	Repair Kit
18	Y413000-18	Dust Wiper			