


- Spare parts -

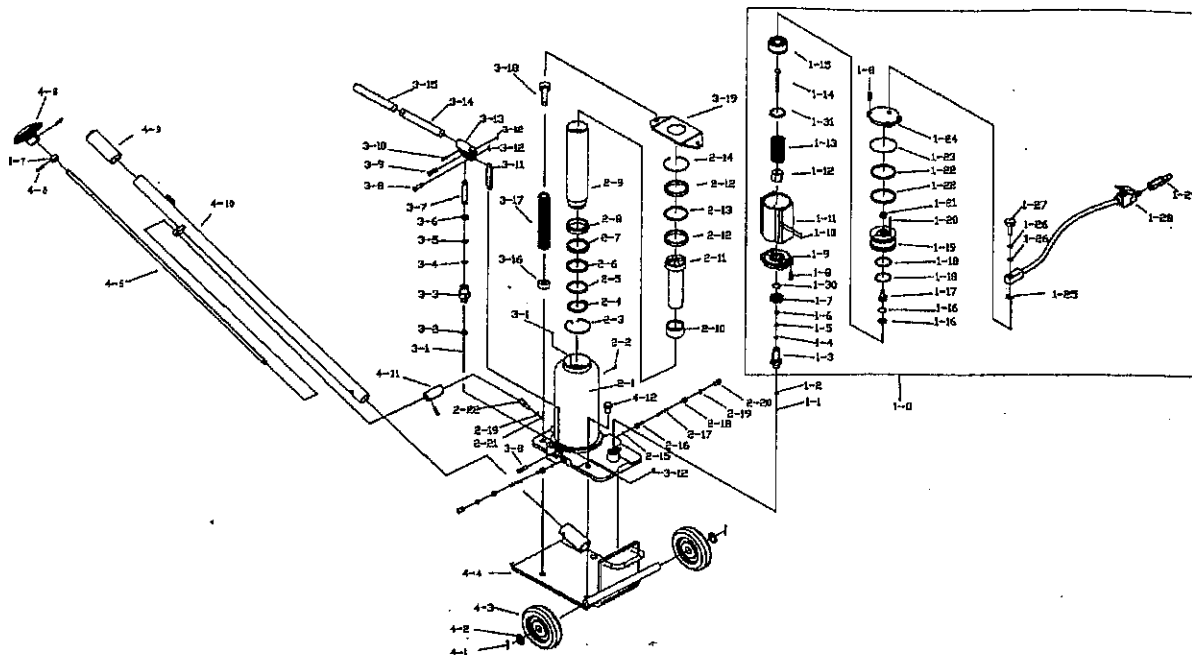

Y432003

Pos.	Art. No.	Description	Pos.	Art. No.	Description
1	Y432003-1/0	Air Motor Assy.	46	Y432003-2/12	Washer
2	Y432003-1/1	Steel Ball	47	Y432003-2/13	O-ring
3	Y432003-1/2	Copper Washer	48	Y432003-2/14	Snap Ring
4	Y432003-1/3	Piston Plunger	49	Y432003-2/15	Steel Ball
5	Y432003-1/4	Y Seal	50	Y432003-2/16	Stud
6	Y432003-1/5	Nylon Gasket	51	Y432003-2/17	Spring
7	Y432003-1/6	Copper Washer	52	Y432003-2/18	Pressure Valve
8	Y432003-1/7	Nut	53	Y432003-2/19	O-ring
9	Y432003-1/8	Bolt	54	Y432003-2/20	Bolt
10	Y432003-1/9	Base Cover	55	Y432003-2/21	Steel Ball
11	Y432003-1/10	Steel Ball	56	Y432003-2/22	Release Valve
12	Y432003-1/11	Air Pump Housing	57	Y432003-3/1	Steel Ball
13	Y432003-1/12	Nut	58	Y432003-3/2	Copper Washer
14	Y432003-1/13	Spring	59	Y432003-3/3	Pump Cylinder
15	Y432003-1/14	Air Pump Piston	60	Y432003-3/4	O-ring
16	Y432003-1/15	Air Piston Base	61	Y432003-3/5	Washer
17	Y432003-1/16	O-ring	62	Y432003-3/6	Dirty proof
18	Y432003-1/17	Air Shuttle Valve	63	Y432003-3/7	Pump Piston
19	Y432003-1/18	O-ring	64	Y432003-3/8	Pin
20	Y432003-1/19	Air Piston	65	Y432003-3/9	Pin
21	Y432003-1/20	Bolt	66	Y432003-3/10	Rivet
22	Y432003-1/21	Shuttle Valve Seal	67	Y432003-3/11	Link
25	Y432003-1/22	O-ring	68	Y432003-3/12	cotter pin
26	Y432003-1/23	O-ring	69	Y432003-3/13	Handle Socket
27	Y432003-1/24	Top Cover	70	Y432003-3/14	Handle (I)
28	Y432003-1/25	Snap Ring	71	Y432003-3/15	Handle (II)
29	Y432003-1/26	O-ring	72	Y432003-3/16	nut
30	Y432003-1/27	Boit	73	Y432003-3/17	spring
31	Y432003-1/28	Air Valve	74	Y432003-3/18	bolt
32	Y432003-1/29	Air Filter	75	Y432003-3/19	spring lid
33	Y432003-1/30	O-ring	76	Y432003-4/1	cotter pin
34	Y432003-1/31	washer	77	Y432003-4/2	Washer
35	Y432003-2/1	Oil Tank Assy.	78	Y432003-4/3	Wheel
36	Y432003-2/2	Oil Filler Plug	79	Y432003-4/4	Bracket
37	Y432003-2/3	Snap Ring	80	Y432003-4/5	Convey rod
38	Y432003-2/4	Snap Ring	81	Y432003-4/6	Screw
39	Y432003-2/5	Washer	82	Y432003-4/7	Fix Block
40	Y432003-2/6	O-ring	83	Y432003-4/8	release Knob
41	Y432003-2/7	Washer	84	Y432003-4/9	Rubber grip
42	Y432003-2/8	Piston Ring	85	Y432003-4/10	Towing Handle
43	Y432003-2/9	Ram Plunger	86	Y432003-4/11	Rod Joint
44	Y432003-2/10	Bushing	PU	Y432020-AMRK	Repair Kit For Air Motor
45	Y432003-2/11	Extension Screw	RK	Y432020-PURK	Repair Kit For Power Unit